

12PLS-2 TWIST-LOK COVER



IMPORTANT

Please read all warnings and follow the installation instructions completely and carefully. Failure to do so may cause product failure, or result in environmental contamination due to liquid leakage into the soil, creating hazardous spill conditions.



WARNING - DANGER

Using electrically-operated equipment near gasoline or gasoline vapors may result in fire or explosion, causing personal injury and property damage. Be sure that the working area is free from such hazards and always use proper precautions.

1 Open Access Cover

Using two hands, twist the access cover in the counter-clockwise direction until open. Then, lift the access cover straight up out of the manhole opening.

WARNING! Do not hit with a hammer or even a rubber mallet. The impact could damage the fiberglass cover.

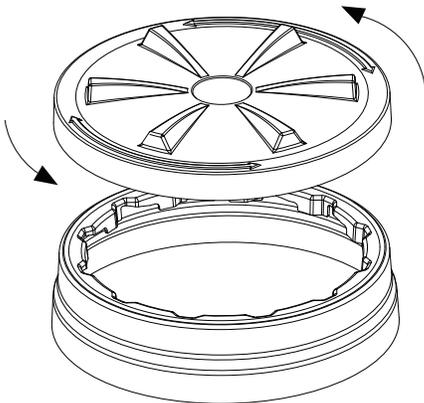


FIGURE 1

2 Clean Sealing Surfaces

Thoroughly clean the gasket and mating surface on the sump locking ring.

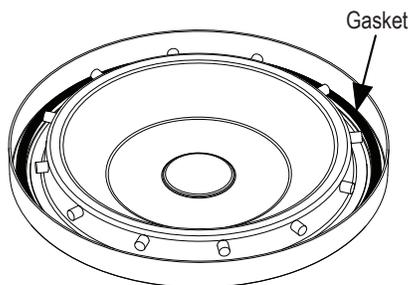


FIGURE 2

3 Lubricate Gasket

Apply Petroleum Containment approved Dry Lubricant to the gasket and rub over the entire surface with a gloved finger.

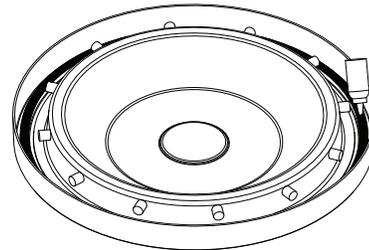


FIGURE 3

4 Lubricate Gasket

Gently lower the access cover straight down onto the sump locking ring. Using two hands, twist the access cover in the clock-wise direction until the internal dowels touch the mating hard stops. If turned fast enough, you will hear a noticeable knocking sound when the lid is fully closed.

WARNING! Do not hit with a hammer or even a rubber mallet. The impact could damage the fiberglass cover.

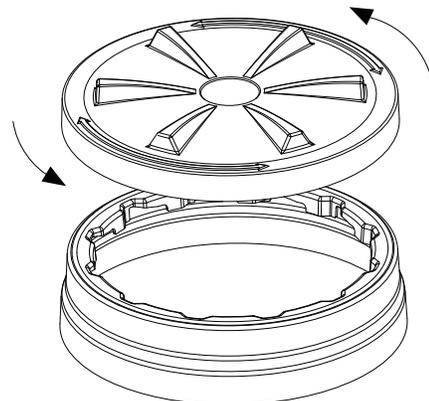


FIGURE 4